

### Important Information

We recommend that luminaires are installed by a qualified electrician ensuring the installation complies with current IEE wiring regulations BS7671:20108 & local building control.

- BELL will not accept responsibility for any claims arising from a poor installation.

### Important User Advice

- The ambient room temperature should not exceed 25°C.
- Ensure that there is adequate free air ventilation around the fitting.
- Always switch off mains supply before installing.

### PIR over-ride function

Turn the supply off/on x 3 to activate.


Turn off the supply for 10 seconds to re-activate the PIR function

This product may contain substances that can be hazardous to the environment if not disposed of properly. Electrical and electronic equipment should never be disposed of with general household waste but must be separated for its correct treatment and recovery.

Where possible recycle your packaging. 

Read these instructions before installation and retain for future reference

This equipment should be installed by a competent electrician

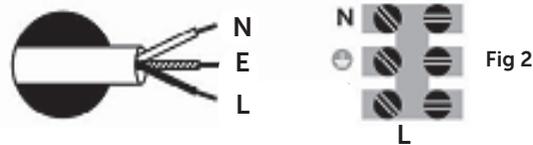

### Installation

- Provide power to the required point of installation. Suitable IP rated junctions boxes should be used where required.
- Remove the 3 grub screws securing the base plate of the luminaire (see Fig 1).
- Using the base plate as a template mark the location of the fixing holes, and drill ensuring not to infringe with any joists, gas or water pipes or electrical cables.
- Feed mains cable through the rubber grommet to retain IP rating, and secure base plate to the desired surface.
- Ensuring correct polarity is observed, carefully wire as shown in Fig 2.
- Secure the fitting to the mounted base plate and fasten the 3 grub screws.
- Switch on and check for correct operation.

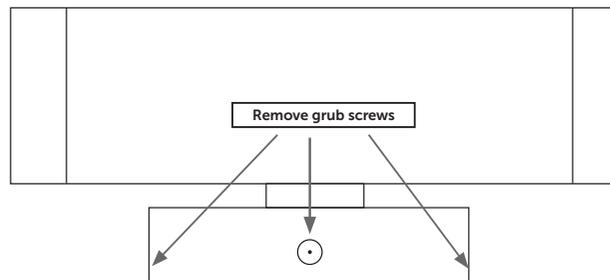


Fig 1  
10339 Shown

