
Salvus MAX

Non-maintained emergency bulkhead

Installation instructions



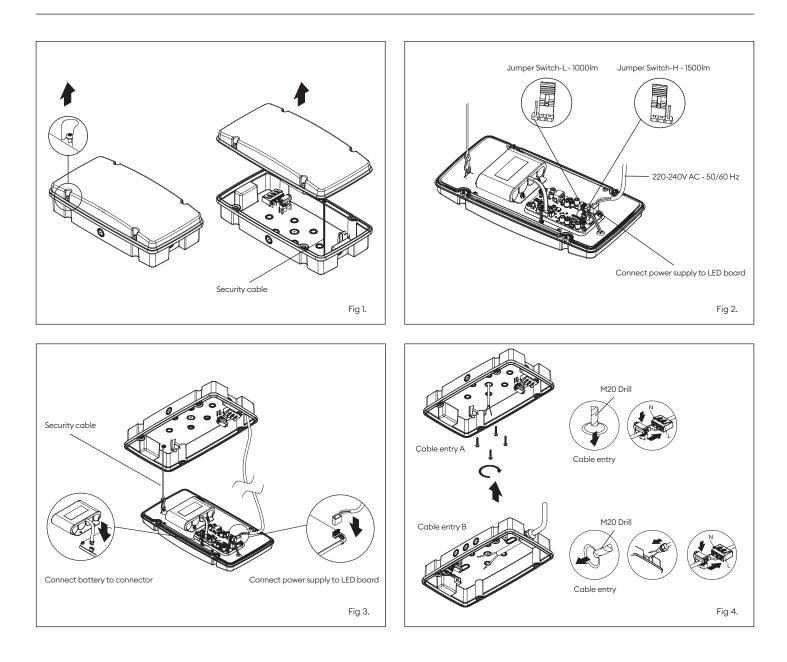



Disposal of this product should be separate from household waste. Please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resource. Household users should contact their local government office for details of where and how they can take these items for environmentally safe recycling.



Replaceable light source by a professional



Replaceable control gear by a professional

Salvus MAX

Non-maintained emergency bulkhead

Installation instructions



Installation

- 1. This product is manual test.
- Important: This unit must be wired by a qualified electrician or suitable competent person. Isolate the mains supply prior to wiring. Remove front cover, screws will be loose for ease of install (Fig 1). 2
- З.
- Screw the back section of the light fitting, onto the mounting surface using the 4x screws provided, taking care to include one of the 4x supplied grommets between the back surface of the product and the mounting surface at each screw (Fig 4). 4.
- 5. If using the supplied wall plugs, drill Ø 4mm holes (Fig 4).
- Feed the mains cabling into the product via the cable entry drill out holes (use M20 drill bit) either on the back or side of the product (Fig 4). 6.
- 7. Ensure glands are fitted to maintain IP rating (Fig 4). 8.
- Connect the mains supply to the terminal block on the back plate. L = permanent live, N = neutral, E = earth. 9. Position the jumper switch to the required lumen output (Fig 2).
- 10
- Attach the security cable (Fig 1). Connect power supply to LED board (Fig 3). 11.
- Connect the battery to the PCB and write commissioning date on the battery (Fig 3). Secure the cover to the body via the 4 captive screws. 12.
- 13.
- 14 Turn on mains power. The green LED indicator should be lit indicating the unit is connected correctly and the battery is charging

Emergency pack commissioning

- Provide an uninterrupted mains power supply (permanent live) for 24 hours.
- 2 Check that the green indicator LED light is lit. This confirms that the batteries are charging. Remove the mains supply, the unit will operate under battery power for 3 hours minimum.
- 3.
- 4. Restore mains power to the unit, check light functions correctly.

Testing

Periodic testing of the unit must be performed in line with the appropriate regulations.

LED Indicator

- Green constantly lit normal standby mode or battery is charging.
- Off emergency mode, battery or light source fault.

Installation data

- Important: This unit must be wired by a gualified electrician or suitable competent person. Isolate the mains supply prior to wiring,
- The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person.
- The driver contained in this luminaire shall only be replaced by the manufacturer or service agent or a similar qualified person. Battery must be replaced when the unit no longer meet it's rated emergency duration, or if a battery fault occurs.

Lumen Output	1000lm	1500lm		
Input voltage	220 - 240V AC 50/60Hz	220 - 240V AC 50/60Hz		
Input current	55mA	55mA		
Input power	4.5W	4.5W		
Inrush current	12.8A 0.1ms	12.8A 0.1ms		



Disposal of this product should be separate from household waste. Please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resource. Household users should contact their local government office for details of where and how they can take these items for environmentally safe recycling.





Replaceable light source by a professional



Replaceable control gear by a professional

Salvus MAX

Non-maintained emergency bulkhead

Installation instructions



en
Emergency installation and maintenance record
Product :
Installer :
Date installed :
Commissioning by :
Date commisioned :

	Year 1		Year 2		Year 3		Year 4	
Month	Signed	Date	Signed	Date	Signed	Date	Signed	Date
1								
2								
3								
4								
5								
6								
7								
8								
9								
10								
11								
12								

5 year warranty



Replaceable light source by a professional



Replaceable control gear by a professional