

1 Zones

Remotes

A zone can cover any space you choose. They can be assigned to different areas of your landscape and you can adjust them completely independently from one another using your remote control.

Wall mounted remote control - WC2820BLK / WC2820WH - **1-4 zones**



Hand held remote control - RC2819 - **1-6 zones**



CollingwoodRGBW app - with TR2818 (requires 15W driver) - **1-8 zones**



Zone 1

Zone 2

Zone 3

Zone 4

Zone 5

Zone 6

Zone 7

Zone 8

WC2820WH | WC2820BLK

Wall mount RGBW remote controls


Using radio frequency (RF) removes the need to connect a signal cable to the controller for a cleaner and quicker installation. By simply touching the screen, select solid colours or start a cycle to change the atmosphere. Colours can also be dimmed by holding down the colour button.



RC2819

Handheld remote control

 Select solid colours or start a colour changing cycle to create the perfect atmosphere. Colours can also be dimmed by holding down the colour button. From just one remote control you can select up to 6 different rooms and change the colours individually to suit. A maximum of 8 remote controls can be used and programmed to store your favourite colours.



CollingwoodRGBW app

iphone, ipad & android app for wireless control

Control RGB & RGBW products with a smart device for up to 8 zones. By simply touching the screen, select solid colours, start a cycle or control lights via a sound to light option. The app can be downloaded for free on Android and iOS.



Note: Use in conjunction with TR2818.

TR2818

WiFi to RF transmitter

Controlling RGB & RGBW products with a phone, computer or tablet could not be easier with the TR2818. Simply add this unit into your Collingwood Lighting colour change installation and select millions of colours in comfort. Using the CollingwoodRGBW app simply connect directly to the TR2818 or via your own WiFi.



Note: The TR2818 requires a 15W driver such as the **PS1524**.