

For pluggable meter dimensions  
and technical info see page  
5.59-5.61.

For our full range Meter  
Enclosure for JF Panelboards,  
see page 3.26.



JKM01

DIN Rail Meters

		Cat ref.
Multi-Function Meter Pulsed/Modbus Single Input		JKM01
Multi-Function Meter Pulsed/Modbus Dual Input		JKM02
For supply cable see JF130VMF on page 5.27		
Note: No cables are supplied with these meters		



ECM01

Panel Meters

		Cat ref.
Multi-Function Meter Pulsed/Modbus DIN 96		ECM01
Note: no cables are supplied with these meters		
For Meter supply cable see JF130VMF (page 5.27)		



JFS03

3 Phase CT Splitter Box

This 3 Phase CT Splitter Box allows the separate monitoring of each phase of a three phase current transformer on individual energy meters.

Description	Cat ref.
3 Phase CT Splitter Box	JFS03



JFA03

Converter

For JKM01 & JKM02 only.

Description	Cat ref.
Standard CT to plug in adapter	JFA03