MAGOUO TWO WIRE CALL POINT



MAGDUOCP MAGDUOCPIP65 IP Version

Call Point for MAGDUO

- Resettable manual call point
- Built-in End of Line function
- Device base included

MAGDUOCPK

Spare Call Point Key for MAGDUO



MAGDUOBBB Battery Expansion Box for MAGDUO

Includes; conduit bushes, coupling and battery leads



MAGDUOIOR Module for MAGDUO

- Configure as an input for reporting from other systems or devices
- Configure as an output to control external systems
- Built-in End of Line function



MAGDUOSHDDB

Deep Base for MAGDUO Devices

For use with; FlexiPoint devices, internal ceiling sounders & strobes



MAGDUOZC4 MAGDUO4 Zone Expansion Card Expands a 4 zone MAGDUO4 to an 8 zone panel

MAGDUOCC4 MAGDUO4 Zone Conventional Card

Expands a 4 zone MAGDUO4 to include 4 zones for conventional detectors and call points



MAGDUOSHDRT

MAGDUO Head Removal Tool

- Required to remove the chamber from the MAGDUO FlexiPoint detectors, sounders and strobes
- The head removal tool may be attached to an extendable pole