

Installation Instructions: Garden Spike Light (10342/10343)

Important Information

We recommend that luminaires are installed by a qualified electrician ensuring the installation complies with current IEE wiring regulations BS7671:2008 & local building control.

- · All tests should be carried out in accordance to EN 50172:2004.
- BELL will not accept responsibility for any claims arising from a poor installation..

Important User Advice

- The ambient room temperature should not exceed
- Ensure that there is adequate free air ventilation around the fitting.
- · Always switch off mains supply before installing.

This product may contain substances that can be hazardous to the environment if not disposed of properly. Electrical and electronic equipment should never be disposed of with general household waste but must be separated for its correct treatment and recovery.

Where possible recycle your packaging



Read these instructions before installation and retain for future reference This equipment should be installed by a competent electrician

Installation


Choose a position for the luminaire ensuring that the ground is suitable to firmly hold the spike and luminaire in position. Check that the ground is not liable to flooding and the spike does not infringe with any underground pipes or cables when pushed into the ground.

- The body of the product should not rest directly on the ground.
- Route the cable from the luminaire to a suitable outdoor socket or an IP65 rated (or higher) weatherproof junction box, avoiding positions where the cable could cause a hazard or be at risk of being cut, trapped or damaged.
- Connect the cable into the junction box or fit a suitable plug for the outdoor socket ensuring correct polarity is observed:

Brown-Live

Blue-Neutral

Green/Yellow-Earth

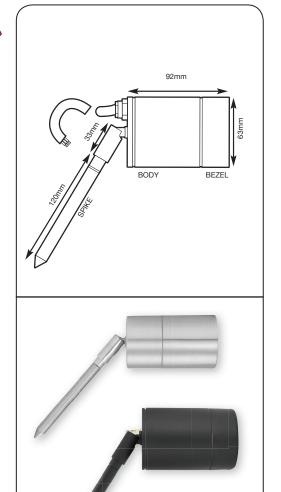



British Electric Lamps Ltd

Unit A Foxbridge Way, Normanton Industrial Estate Normanton, West Yorkshire. WF6 1TN